

Technical Bulletin

Bulletin No.: PRO-01-31

Effective Date: 9/15/87


Page: 1 of 1

Subject: Compressor Inlet Check Valves & Bendix BX-2150

The compressor inlet check valve can be utilized when the compressor inlet is connected to the vacuum side of the engine induction system or when an air strainer is mounted directly to the compressor inlet. **It must not be installed on compressors with pressurized induction.**

It is extremely important that inlet adapter 297871 be used when installing an inlet check valve on the Bendix BX-2150 single cylinder air compressor. Failure to install adapter 297871 will result in compressor damage and eventual failure.

BX-2150 COMPRESSOR INLET CHECK VALVE INSTALLATION

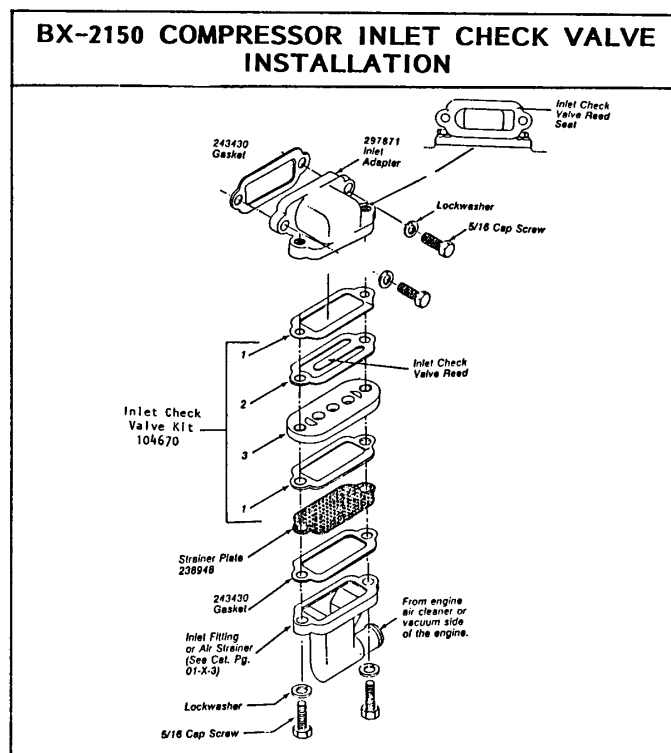

Reference: Master Catalog Page 01-A-3 and Quick Reference Catalog Page 9.

